



Soft-Glo Level Monitor Error Codes

flash

Sensor Error:
Voltage Too Low

flash

Sensor Error:
Voltage Too High

flash

Communication Error:
No CAN Data Detected
(on slave device)

NOTICE

If the display showing this error is the Master display, this would indicate that the device is not receiving a voltage from the transducer.

flash

Communication Error:
CAN link is up,
but msg for current tank
not found (on slave device)

